

nutribullet.

**BLENDER
COMBO**

LICUADORA

MARCA: NUTRIBULLET®

MODELO: NBC-12A

ESPECIFICACIONES ELECTRICAS: 120 V ~ 60Hz 1 200W máx IPX2

HECHO EN: CHINA



User guide.

- Lea cuidadosamente el manual antes de usar su aparato.
- Repase y guarde estas indicaciones.
- Conserve y guarde estas advertencias de seguridad para futura referencias.

Important safeguards.

Warning! To avoid the risk of serious injury, carefully read all instructions before operating your nutribullet®. When using any electrical appliance, basic safety precautions should always be observed, including the following important information.

! Save these instructions! ● FOR HOUSEHOLD USE ONLY

GENERAL SAFETY INFORMATION

- Close supervision is necessary when any appliance is used by or near children. Keep cord out of reach of children. This appliance is not a toy. Do not allow children to play with it.
- Do not use outdoors.
- **NEVER LEAVE THE NUTRIBULLET® UNATTENDED WHILE IT IS IN USE.**
- **ALWAYS TURN THE NUTRIBULLET® OFF WHEN NOT IN USE.**

HEAT & PRESSURE SAFETY

- Always use extreme care and attention when using hot ingredients in any blending product, as the friction from the rotating blades (during the blending process) combined with the thermal energy of the heated ingredients can create a dangerous situation if not properly controlled.

BLENDING WITH NUTRIBULLET® CUPS:

To avoid personal injury, never blend hot ingredients or liquid in any sealed nutribullet® cup!

WARNING! Heated ingredients can pressurize sealed containers when agitated and cause cup and blade separation or violently expel hot contents upon opening. Always start the blending process with room temperature or refrigerated ingredients and liquids (21°C/70°F or cooler).

Never continuously operate for longer than necessary to create your recipe — generally less than one minute. Friction from prolonged operation can heat ingredients and generate internal pressure in the sealed container. This pressure can cause the cup and blade to separate or blended contents to erupt from the container, resulting

WARNING! in possible personal injury and/or property damage. If the sealed nutribullet® cups are warm to the touch, power off your machine and allow the vessel to cool for fifteen minutes or more. Allow contents to settle before slowly releasing the cup from the motor base. With the nutribullet® cup, pointed away from your face and body, slowly unscrew the easy-twist extractor blade to gently release any residual pressure.

If you need to blend for longer than one minute, blend for 1-minute intervals. After each 1-minute interval, allow the motor base to shut off completely and wait at least one minute before starting the next cycle. Do not run for more than 3 consecutive 1-minute intervals to prevent the contents from overheating. Allow contents to settle for 2-3 minutes after the third blending cycle to prevent overheating and buildup of pressure.

Sugar in fruits and vegetables can ferment over time, releasing gases that cause pressure to build up in a sealed nutribullet® cup. **Do not store any smoothies or blended mixtures in vessels sealed with the easy-twist extractor blade.** If you will not consume your smoothie immediately, remove the

WARNING! easy-twist extractor blade and cover your nutribullet® cup with plastic wrap before refrigerating. If your smoothie or blended mixture was made in the pitcher, transfer to another storage container before refrigerating. Never store any blended mixture in a sealed cup unrefrigerated, or for any prolonged period of time; contents will spoil and ferment, producing gases that might cause eruption.

Never blend carbonated liquids or effervescing ingredients (e.g., baking soda, baking powder, yeast, etc.). Pressure from released gases can cause a sealed blending container to burst, resulting in possible injury and/or property damage.


BLENDING WITH THE PITCHER:

Use extra caution when blending hot liquids in the pitcher.

Never turn the power on while using the pitcher without the vented lid cap inserted and locked into the pitcher lid, as ingredients can splash, and if hot or warm, could potentially cause thermal injury and/or property damage.

WARNING!

Steam and splattering ingredients can escape through the pitcher lid, potentially scalding and/or burning the user. **NEVER blend hot liquids in your pitcher without the pitcher lid and vented lid cap locked and attached.** The vented lid cap allows steam and pressure to escape, while guarding against excess splashing. **NEVER blend hot liquids in your nutribullet® cups or any other sealed vessel.**

When blending hot liquids, add liquid and solid ingredients to your pitcher below their respective MAX lines. Attach the pitcher lid with the vented lid cap inserted and locked. Press **POWER**  and begin blending on the **LOW** setting. Once ingredients are integrated, increase speed as needed.

If the nutribullet® blends for longer than one minute, friction from the blades can cause ingredients to heat and generate internal pressure inside the vessel. If a blending vessel becomes warm to the touch, turn off the machine and allow the vessel to cool completely before carefully opening, pointed away from your body to avoid injury.

BLADE SAFETY

Never store any easy-twist extractor blade in the motor base unattached to a nutribullet® cup. An exposed blade can present a laceration hazard.

WARNING!

Blades are sharp! Handle carefully. Use care when handling any blade. To avoid laceration injury, do not handle or touch any blade edge.

AVOID CONTACT WITH MOVING PARTS! Keep hands and utensils out of and away from blades while blending food to reduce the risk of severe personal injury.

- **TO REDUCE THE RISK OF PERSONAL INJURY OR PROPERTY DAMAGE,** never place the easy-twist extractor blade on the motor base without the cup properly attached. Make sure the easy-twist extractor blade is securely twisted (hand-tightened) onto the nutribullet® cup before placing it on the motor base and operating the nutribullet® Blender Combo. Check to make sure the easy-twist extractor blade is aligned properly before placing it on the motor base and operating your nutribullet® Blender Combo.

- After blending, turn the power button off. Wait to remove the nutribullet® cup/easy-twist extractor blade assembly from the motor base until the motor comes to a full stop and the unit powers down completely. Taking the blending vessel off the unit prior to complete power down can cause damage to the easy-twist extractor blade coupling or motor gear.

Never use the nutribullet® Blender Combo without adding liquid, as doing so may damage the blades.

- The cyclonic action of your nutribullet® Blender Combo requires the use of liquids to make smoothies and other nutritious items. The nutribullet® Blender Combo is not intended to be used without liquids, or as an ice crusher. **ALWAYS ADD LIQUID to your recipe.**
- **DO NOT USE** the easy-twist extractor blade for grinding dry ingredients such as grains, cereal, or coffee, as this may damage the motor and/or the easy-twist extractor blade.
- We recommend replacing your easy-twist extractor blade every 6 months (depending on use) or as needed for optimal performance.

PITCHER SAFETY

- Always operate the pitcher with the pitcher lid securely in place.
- With recipes that require certain ingredients to be incorporated during blending, first add the base ingredients, seal the pitcher lid with vented lid cap attached, and begin blending. Then, once the ingredients are well mixed, twist open the vented lid cap and carefully pour or drop ingredients into the mixture.
- If you need to push ingredients closer to the blade, **ONLY USE THE TAMPER PROVIDED** with the nutribullet® Blender Combo. **DO NOT** use any apparatus other than the tamper to push ingredients toward the blade. The tamper is specifically designed not to come in contact with the blade. Spatulas, spoons and other tools can make contact with the blade, which may result in damage to the machine, damage to property, and/or possible injury.
- **NEVER USE YOUR FINGERS OR ANY PART OF YOUR HAND TO PUSH INGREDIENTS DOWN TOWARD THE BLADE.** Only use the provided tamper.

Remember to use extra caution when blending hot liquids or ingredients in the pitcher.

- Spray or escaping steam may cause burns and/or property damage.
- Do not fill container above the maximum capacity lines indicated for liquids and solid ingredients.
- Always begin blending hot ingredients on the **LOW** setting.
- Keep hands and other exposed skin away from lid opening to prevent possible burns.

ELECTRICAL SAFETY

WARNING!

Do not use this product in locations with different electrical specifications or plug types. Do not operate with any type of plug adapter or voltage converter device, as these may cause electrical shorting, fire, electric shock, personal injury, or product damage. This appliance has important markings on the plug blade. The cord is not suitable for replacement. If damaged DO NOT use the appliance.

- The use of attachments, including canning jars, is not recommended and may cause fire, electric shock, personal injury, or product damage and will void the product's warranty.
- To avoid the risk of electric shock, never immerse the cord, plug, or motor base of the nutribullet® Blender

Combo in water or other liquids. Do not plug into socket and immediately discontinue use if the cord, plug, or motor base is damaged.

- Always **POWER OFF** and **UNPLUG** the nutribullet® Blender Combo when it is not in use or **BEFORE** assembling, disassembling, changing accessories, or cleaning. Do not attempt to handle the nutribullet® Blender Combo until all parts have stopped moving.
- Do not allow the cord to hang over the edge of the table or counter. Do not pull, twist, or damage the power cord. Do not allow the cord to touch hot surfaces, including the stove.
- If the motor stops working, unplug the motor base and let it cool for at least 15 minutes before attempting to use it again. Your nutribullet® has an internal thermal breaker that shuts off the motor when it overheats. The thermal breaker will reset when the unit is unplugged, and the thermal breaker cools down sufficiently.

POLARIZED PLUG INFORMATION:

- Your nutribullet® Blender Combo has a polarized plug (one prong is wider than the other) to reduce the risk of

electric shock. This plug will correctly fit in a polarized outlet only one way. If the plug does not fit fully in the outlet, reverse the plug. If it still does not fit, contact a qualified electrician. For your safety, do not modify the plug or motor base in any way. Doing so will increase risk of injury and void the product's warranty.

- This appliance has important markings on the plug. The attachment plug or entire cord set is not suitable for replacement. If damaged, the appliance will be replaced.

STOVE-TOP HEATING SAFETY

Do not blend hot ingredients in any sealed nutribullet® cup!

WARNING: To heat items that have been blended at room temperature or cooler (21°C/70°F or less), transfer mixture to a stovetop pot to heat. Always use a thermometer to test the internal temperature of cooked ingredients; they may feel cool to the touch, yet still be hot inside.

The nutribullet® Blender Combo is not intended for use on the stove top. Do not place the motor base or any nutribullet® accessory on

the stove or microwave or immerse in boiling water. This may result in damage to the accessory.

VENTILATION WARNINGS

To prevent a fire hazard, power base openings (underneath the motor base) should be free of dust and lint and never obstructed with flammable materials such as newspapers, tablecloths, napkins, dishtowels, place mats or other similar type materials.

- **CAUTION!** Always operate the nutribullet® Blender Combo on a level surface, leaving unobstructed space beneath and around the motor base to permit proper air circulation. Vents on the bottom of the product are provided for ventilation to ensure reliable motor operation and to prevent overheating.

MEDICAL SAFETY

- The information contained in this User Guide or Recipe Guide is not meant to replace the advice of your physician. Always consult your physician regarding health and nutrition concerns.

MEDICATION INTERACTIONS:

- If you are taking any medication, especially cholesterol-lowering medication, blood

thinners, blood pressure drugs, tranquilizers, or antidepressants, please check with your physician before trying any of the recipes contained in this guide or the recipe guide.

- Avoid blending the following seeds and pits in the nutribullet® Blender Combo, as they contain a chemical known to release cyanide into the body when ingested: apple seeds, cherry pits, plum pits, peach pits, and apricot pits. Fruit pits may also cause damage to the pitcher.

ADDITIONAL INSTRUCTIONS FOR PROPER USAGE

- Do not place any of the nutribullet® Blender Combo parts in a microwave, oven, or in a stovetop pot, or immerse in boiling water, as this may result in damage to the part.
- **TO AVOID LEAKAGE, DO NOT OVERFILL THE BLENDING VESSELS!** The pitcher is marked with two MAX lines: one for solid ingredients (higher line) and one for liquid ingredients (lower line). Your nutribullet® cups are also marked with a MAX line. When filling the blending vessels, make sure your ingredients do not exceed their respective MAX lines. Exceeding the indicated

MAX lines can result in leakage, and may lead to dangerous pressurization.

- Blending vessels and easy-twist extractor blades are specific to the exact model of nutribullet® Blender Combo you possess. Use of incompatible parts (parts from other models) may result in damage to your nutribullet® Blender Combo or create safety hazards. When ordering replacement parts (nutribullet® cups, pitcher, easy-twist extractor blades) via customer service, please specify the machine model to ensure you receive parts that are compatible with your unit.
- Periodically inspect all nutribullet® Blender Combo components for damage or wear that may impair proper function or present an electrical hazard. Make sure that the power cord and plug are undamaged. Discontinue use and replace blending vessels if you detect cracking, cloudiness, or damage to the plastic. Ensure that the blades rotate freely and that the structure is undamaged. Make sure that the motor base is unobstructed and clean. Follow maintenance recommended in the User Guide and never operate your nutribullet® Blender Combo with damaged

components. If your nutribullet® Blender Combo malfunctions in any way, immediately discontinue use and contact customer service at **800-nbullet**. You may purchase new nutribullet® cups, pitchers, and easy-twist extractor blades by contacting customer service.

! Save these instructions!

If you have any comments, questions, or concerns, please call customer service at: **800-nbullet**.



Contents.


- 12 What's included**
- 13 Assembly guide**
- 14 Getting started**
 - 14 Safety guide
 - 15 Pitcher assembly & use
 - 18 nutribullet® cup assembly & use
- 20 Blending control panel.**
 - 21 How to use the blending control panel
- 22 Care & maintenance.**
 - 22 How to clean the nutribullet®
 - 24 How to store
- 24 Replacement parts**
- 25 nutribullet® Blender Combo's one-year limited warranty**

Thank you for purchasing the nutribullet®
Blender Combo.

What's included.



900 ml
cup

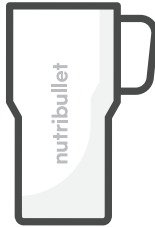

700 ml
handled cup



500 ml
cup



pitcher with
integrated blade



easy-twist
extractor blade



2 to-go lids



motor base




tamper



pitcher lid
with vented
lid cap

Assembly guide.

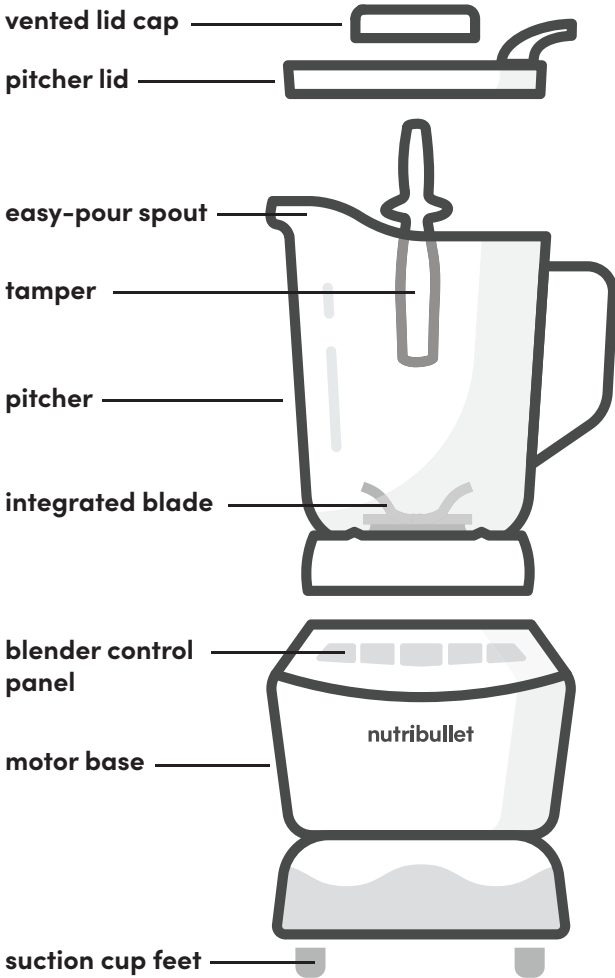

Getting started.

PLEASE KEEP THESE IMPORTANT SAFEGUARDS IN MIND WHEN USING THE APPLIANCE:

- Make sure the base is plugged in for use.
- **DO NOT** attempt to operate the pitcher on the appliance without attaching the pitcher lid and vented lid cap.
- Never run the appliance while empty.
- Appliance accessories are not intended to be used in the microwave as it may damage the accessories.
- **Never** leave the appliance unattended while in use.

Never blend hot ingredients when using any sealed nutribullet® cups.

WARNING: Heated ingredients can pressurize sealed containers when agitated and violently expel hot contents upon opening. Always start the blending process with room temperature or refrigerated ingredients and liquids (21°C/70°F or cooler).



Use extra caution when blending hot liquids in the pitcher.

WARNING: Steam and splatters can escape through the vented lid, potentially causing scalding and/or burns. **NEVER** blend hot liquids in your pitcher without the pitcher lid and vented lid cap attached. The vented lid cap is ventilated to allow steam and pressure to release, while guarding against excess splashing. **NEVER blend hot liquids in your nutribullet cups or any other sealed vessel.**

When blending hot liquids, add liquid and solid ingredients to your pitcher below their respective MAX lines. Attach the pitcher lid with the vented lid cap inserted. Press the **POWER** icon, then begin blending on the **LOW** setting. Once ingredients are integrated and the mixture is level (no splashing), increase speed as needed.

Pitcher assembly & use.

- 1 Review all warning and caution statements in the Important Safeguards section (pg 2-5) and on the previous page before proceeding to Step 2.



- 2 Place the motor base on a clean, dry, level surface such as a counter or table.




- 3 Place the pitcher on a clean, dry, level surface. Add the ingredients to the pitcher, making sure they do not exceed the MAX line.

NOTE: Always add liquid. The blending pitcher is marked with two MAX lines: one for solid ingredients (higher line) and one for liquids (lower line). When filling the blender, make sure your ingredients do not exceed their respective MAX lines.



- 4 Place the pitcher lid with vented lid cap attached on the pitcher, making sure it's aligned to the handle.

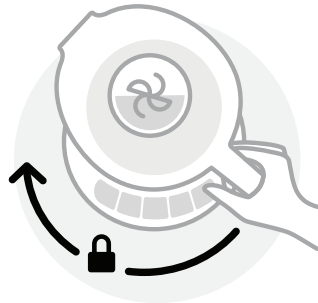


- 5 Place the pitcher onto the motor base — handle facing to the right of the blending control panel, never towards the back — and gently twist clockwise so it locks in place. When you hear the click, it's locked and ready to blend.

NOTE: If you are left-handed, place the handle facing towards the center of the blending control panel and twist clockwise.

6



Plug the power cord into an electrical outlet and press **POWER**  to turn on the blender.

7



To start blending, select a speed or the **EXTRACT** program on the blending control panel. This program will turn off automatically. Buttons will illuminate while in use.

NOTE: Proceed to the blending control panel chart on page 20 for speed definitions.

NOTE: If you need to add additional ingredients while blending, switch the setting to **LOW** and remove the vented lid cap from your pitcher lid, leaving the lid attached. Add ingredients through the hole in the top of the lid, followed by the tamper if necessary. Replace the vented lid cap, then increase to your desired speed. **DO NOT** attempt to add items through the vent hole when blending hot ingredients.



CAUTION: Do not use any apparatus other than the tamper to push ingredients toward the blade. The tamper is specifically designed not to come in contact with the blade. Spatulas, spoons and other tools are long enough to reach the blade, which may result in damage to the machine, damage to property, and possible injury.

8



If the ingredients stick to the side of the pitcher, stop the appliance by pressing **POWER** ⏻ and wait for the blade to stop turning. Then remove the pitcher lid and use the tamper to dislodge the ingredients. When finished, replace the lid and continue blending. If the ingredients continue to stick, consider adding a little more liquid.

9



When you have reached your desired consistency, pause/stop the appliance by pressing **POWER** ⏻ or the speed you selected and wait for the blades to stop turning. The unit will enter idle-mode. The **POWER** ⏻ button will remain illuminated.



WARNING: Blades are sharp. Never insert your hands into the pitcher.

10 Press **POWER** ⏻ to turn off the unit completely.

11



Twist pitcher counterclockwise and lift off the motor base. Pour and enjoy!


nutribullet® cup assembly & use.

- 1 Review all warning and caution statements in the Important Safeguards section (pg 2-5) before proceeding to Step 2.
- 2 Place the motor base on a clean, dry, level surface such as a counter or table.



- 3 Add ingredients and liquid to the nutribullet® cup.

NOTE: Always add liquid. Do not overfill! To avoid leakage, do not add ingredients beyond the MAX line.

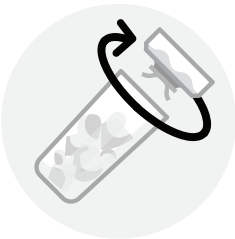

- 4 Twist the easy-twist extractor blade onto the cup until tightly sealed.




WARNING! Handle the easy-twist extractor blade assembly with care, as the blades are sharp.

Never leave the appliance unattended while in use.


NEVER BLEND HOT INGREDIENTS, as doing so may cause excessive pressure buildup, resulting in risk of personal injury and or property damage.

- 5 A line drawing of the NutriBullet motor base sitting on a surface. A power cord is plugged into an electrical outlet. The motor base is shown in a circular frame.

Plug the power cord into an electrical outlet and press **POWER** to turn on the blender.

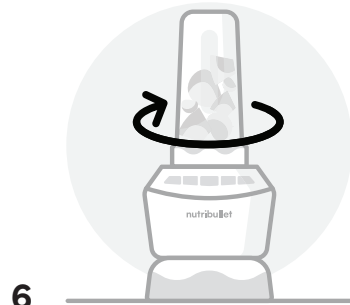

Turn the cup upside down and place it onto the motor base, gently turning the cup clockwise to lock into the motor base.

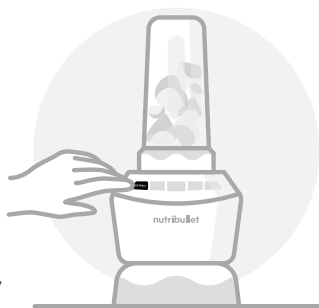



7

To start blending, select a speed or the **EXTRACT** program on the blending control panel. This program will turn off automatically. Buttons will illuminate while in use.

NOTE: Proceed to the blending control panel chart on page 16 for speed definitions.



8

When you have reached your desired consistency, pause/stop the appliance by pressing **POWER**  or the speed you selected and wait for the blades to stop turning. The unit will enter idle-mode. The **POWER**  button will remain illuminated.

NOTE: speeds will automatically shut off after 60 seconds.

9 Press **POWER**  to turn off the unit completely.



10

Unlock the assembly by gently twisting the cup counterclockwise. You will hear a click. Enjoy!


NOTE: Blending should not require longer than one minute to yield smooth and creamy results.



CAUTION


Do not remove the easy-twist extractor blade from the NutriBullet® cup until blending has completely ceased. Do not use the easy-twist extractor blade as a storage lid for your cup. Some foods may contain active ingredients or release gases that will expand if left in a sealed container, resulting in excessive pressure buildup that can pose a risk of injury. When storing contents in the cup, use plastic wrap or foil to seal your container. Always point contents away from your body when unsealing.

Blending control panel.

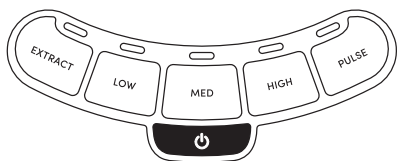


TURNING ON/OFF

The power button actuates the master power of the appliance. When pressed, this button lights up to indicate the motor is powered on, and the other functions can be used. Always turn the master power off and unplug the unit when the machine is not in use.

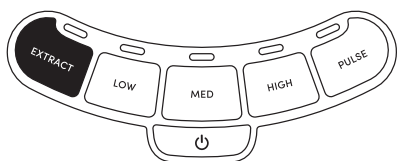


THE EXTRACT PROGRAM

Use to break down whole fruits, vegetables, and ice into nutrient-rich smoothies. This button will activate a run cycle that shuts off automatically.

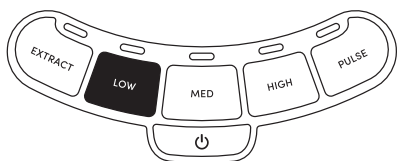

LOW SPEED

Use to mix thin batter, gravies, marinades; scramble eggs; process cooked foods and uncooked fruits.

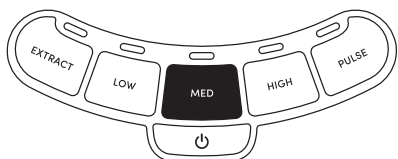


MEDIUM SPEED

Use to cream soups, mix dips, grind nuts, and blend sauces, spreads, mixed drinks, powdered drinks, and milkshakes.




WARNING!

NEVER BLEND HOT INGREDIENTS IN ANY SEALED NUTRIBULLET® CUP. Doing so may cause excessive pressure buildup, resulting in risk of personal injury or property damage. Hot items should only be blended in the pitcher using proper safeguards.

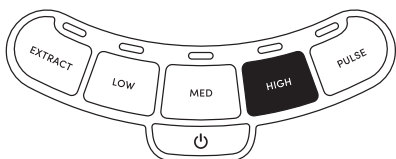

HIGH SPEED

Use to liquefy thick mixtures and blend frozen fruits and vegetables.

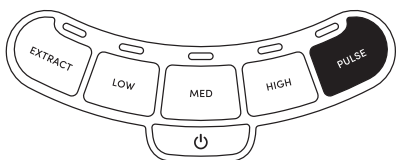

PULSE*




Use to control chopping and processing.



WARNING: DO NOT use this setting with hot ingredients!


How to use the blending control panel.

LOW, MEDIUM OR HIGH

Select a speed and press once to turn on. The button will illuminate. To pause/stop the unit, press the button a second time — it will de-illuminate — or press **POWER** . While in the idle-mode, the **POWER**  button will remain lit. To fully power down after pausing, press **POWER**  and unplug the unit.

NOTE: If using the pitcher, speeds will run until paused/stopped. If using the nutribullet® cups, speeds will automatically shut off after 60 seconds.

THE EXTRACT PROGRAM

Press the **EXTRACT** button and the nutribullet® Blender Combo will do the work for you. This program automatically stops at the end of its cycle. To pause or stop the blender, press **EXTRACT** again or **POWER** .

PULSE

Press and release the **PULSE** button to chop ingredients. If you hold this button down, it will continue to run until you release it.

Care & maintenance.

Cleaning the nutribullet® is easy. The pitcher is dishwasher-safe while the cups and to-go lids are **TOP RACK** dishwasher-safe. The easy-twist extractor blade and motor base can be quickly hand-washed with soap and water. Read on for best practices.

Here's how to clean the nutribullet®:

STEP 1:

The most important thing — **ALWAYS POWER OFF THE UNIT** and **UNPLUG** the motor base from the power outlet when it is not in use. Do not attempt to handle the appliance until all parts have stopped moving! This includes during assembly and disassembly, while changing accessories during cleaning, and any time you leave the machine unattended.

STEP 2:

Detach the nutribullet® cup / easy-twist extractor blade or pitcher from the motor base.

STEP 3:

Clean the individual components (motor base, easy-twist extractor blade, nutribullet® cups) as recommended in the following pages.

MOTOR BASE:

- To avoid risk of injury, **NEVER** attempt to clean the actuator system on the motor base while the nutribullet® Blender Combo is plugged in.
- Do not attempt to remove any pieces from the motor base.
- Use a sponge or dish cloth dampened with warm soapy water to wipe down the motor base until clean.
- If necessary, you may use a small brush to scrub the actuator system area to ensure it's clean.
- To clean leakage residue from the motor base, wipe with a damp sponge and warm water.
- If necessary, you may use a small brush to scrub the actuator system area to ensure it's clean.



WARNING: Never submerge the motor base in water.

EASY-TWIST EXTRACTOR BLADE:

- Blades are sharp! Handle the easy-twist extractor blade with care when cleaning! It is best to clean blades immediately after use to reduce buildup of residue. If food particles get stuck, use a small brush or sponge to target and dislodge them.
- **Do not remove any components of the easy-twist extractor blade;** this can result in permanent damage to the blade, resulting in leakage when blending. If, over time, the easy-twist extractor blade becomes loose or damaged, you may order a new easy-twist extractor blade at nutribullet.com or contact customer service.
- Dry the easy-twist extractor blade completely after every use.
- Regularly check the condition of the bottom of the blade for cracking or breakage. If damaged, replace easy-twist extractor blade immediately to prevent possible personal injury.

NUTRIBULLET® CUPS & TO-GO LIDS:

These items are **TOP RACK** dishwasher-safe. We recommend rinsing and briefly scrubbing them with a dish brush to remove any remaining debris before placing in the dishwasher. **NEVER** use the sanitize cycle to wash the cups — heat this high can warp the plastic.

NUTRIBULLET® PITCHER:



WARNING: Blades are sharp! Use caution when cleaning the pitcher.

- The pitcher is dishwasher-safe. We recommend rinsing and briefly scrubbing it with a dish brush to remove any remaining debris before placing in the dishwasher. **NEVER** use the sanitize cycle to wash the pitcher — heat this high can warp the plastic.
- If preferred, hand-wash the pitcher with soap and water. Stuck-on ingredients might require extra scrubbing from a dish brush or sponge.
- Regularly check the structure of the pitcher and twisting threads for cracking, crazing, or breakage.

If damaged, replace immediately to prevent possible personal injury.

- **NEVER USE A PITCHER THAT DOES NOT PROPERLY ALIGN WITH THE BLADE.**

Doing so may cause the pitcher and motor base to separate, exposing the blade assembly and potentially causing severe personal injury.

TAMPER

- Always hand-wash the tamper with soap and water. Stuck-on ingredients might require extra scrubbing from a dish brush or sponge.

STUBBORN CLEAN UP:

If ingredients get stuck to the nutribullet® cups, easy-twist extractor blades, or pitcher, here's an easy cleanup solution: fill the vessel with room temperature (21°C/70°F or less)

water to its MAX line and add 1-2 drops of dish soap. For cups, twist on the easy-twist extractor blade, and blend on the motor base for 20-30 seconds. For the pitcher, attach lid and blend on the motor base for the same amount of time, 20-30 seconds. This should loosen debris enough to scrub away with soap and water.

How to store:

Store the nutribullet® Blender Combo pitcher upright with the pitcher lid secured on top. Do not place anything on top of the pitcher lid. Store remaining pieces in a safe place where they will not be damaged and won't cause harm.



WARNING: NEVER store the easy-twist extractor blade on the motor base without a nutribullet® cup or the pitcher as the exposed blades pose a serious laceration hazard.

Replacement parts.

To order additional parts and accessories, please visit our website at **nutribullet.mx**

nutribullet® Blender Combo one-year limited warranty.

LIMITED WARRANTY FOR NUTRIBULLET®

nutribullet's limited warranty obligations are confined to the terms set forth below:

nutribullet, LLC (“nutribullet”) warrants this nutribullet® against defects in materials and workmanship for a period of one year from the date of original retail purchase. This limited warranty is valid only in the country in which the product is purchased and comes with the product at no extra charge, however shipping and processing fees will be incurred for returns, replacements and or refunds.

If a defect exists, and nutribullet® is obligated under this limited warranty, at its option nutribullet® will (1) repair the product at no charge, using new or refurbished replacement parts, (2) exchange the product with a product that is new or that has been manufactured from new or serviceable used parts and is at least functionally

equivalent to the original product, or (3) refund the purchase price of the product. A replacement product assumes the remaining warranty of the original product. A repaired product has a one-year warranty from the date of repair. When a product or part is exchanged, any replacement item becomes your property and the replaced item becomes nutribullet's property. When a refund is given, your product becomes nutribullet's property.

OBTAINING WARRANTY SERVICE

For limited warranty service, simply call our customer service department at **800-nbullet**. When you contact our customer service department you will be asked for your name, address, telephone number and to provide proof of the original purchase (receipt) containing a description of the product(s), purchase date, and the appropriate nutribullet® serial number(s). Before you send your product for limited

warranty service please make sure to keep a copy of all relevant documents for your files (receipt, etc.). It is always recommended to purchase product insurance and tracking services when sending your product for service. Remember, shipping and processing fees will be incurred and are not covered by the one-year limited warranty.

EXCLUSIONS & LIMITATIONS

This nutribullet® One-Year Limited Warranty applies only to nutribullet® products distributed by or for nutribullet® that can be identified by the “nutribullet” trademark, trade name, logo and bar code. nutribullet® Blender Combo’s One-Year Limited Warranty does not apply to any other products that may appear to be authentic, but were not distributed/sold by nutribullet, LLC.

Normal wear and tear is not covered by this limited warranty.

This limited warranty applies to consumer use only, and is void when the product is used in a commercial or institutional setting.

This limited warranty extends only to the original consumer purchaser and is not

transferable. In addition, proof of purchase must be demonstrated.

Repair or replacement of the product (or, if repair or replacement is not feasible, a refund of the purchase price) is the exclusive remedy of the consumer under this limited warranty. nutribullet, LLC shall not be liable for any incidental or consequential damages for breach of this limited warranty or any implied warranty on this product.

This limited warranty gives you specific legal rights, and you may also have other rights which vary from state to state. nutribullet® is not liable for any damage to products not covered by this warranty (e.g., cups, book, User Guide).

This limited warranty does not apply: (a) to damage caused by accident, abuse, misuse, or misapplication; (b) to damage caused by improper maintenance (including unauthorized parts service); (c) to a product or a part that has been modified in any way; (d) if any nutribullet® serial number or trademark has been removed or defaced; and or (e) if the product has been used with an adapter/converter.

THIS LIMITED WARRANTY AND THE REMEDIES SET FORTH ABOVE ARE EXCLUSIVE AND IN LIEU OF ALL OTHER WARRANTIES, REMEDIES AND CONDITIONS, WHETHER ORAL OR WRITTEN, EXPRESS OR IMPLIED. NUTRIBULLET® SPECIFICALLY DISCLAIMS ANY AND ALL IMPLIED WARRANTIES, INCLUDING, WITHOUT LIMITATION, WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE. IF NUTRIBULLET CANNOT LAWFULLY DISCLAIM IMPLIED WARRANTIES UNDER THIS LIMITED WARRANTY, ALL SUCH WARRANTIES, INCLUDING WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE ARE LIMITED IN DURATION TO THE DURATION OF THIS LIMITED WARRANTY.

No nutribullet® reseller, agent, or employee is authorized to make any modification to this warranty.

NUTRIBULLET IS NOT RESPONSIBLE FOR DIRECT, SPECIAL, INCIDENTAL OR CONSEQUENTIAL DAMAGES RESULTING FROM ANY BREACH OF WARRANTY OR CONDITION, OR UNDER ANY OTHER LEGAL THEORY, INCLUDING BUT NOT LIMITED TO LOST PROFITS, DOWNTIME, GOODWILL, DAMAGE TO

OR REPLACEMENT OF EQUIPMENT AND PROPERTY. NUTRIBULLET® SPECIFICALLY DOES NOT REPRESENT THAT IT WILL BE ABLE TO REPAIR ANY PRODUCT UNDER THIS LIMITED WARRANTY.

Some states and provinces do not allow the exclusion or limitation of incidental or consequential damages or exclusions or limitations on the duration of implied warranties or conditions, so the above limitations or exclusions may not apply to you. This warranty gives you specific legal rights, and you may also have other rights that vary by state or province.

nutribullet®

LICUADORA EN COMBO

LICUADORA

MARCA: NUTRIBULLET®

MODELO: NBC-12A

ESPECIFICACIONES ELECTRICAS: 120 V ~ 60Hz 1 200W máx IPX2

HECHO EN: CHINA



Manual de usuario.

- Lea cuidadosamente el manual antes de usar su aparato.
- Repase y guarde estas indicaciones.
- Conserve y guarde estas advertencias de seguridad para futura referencias.

Recomendaciones & precauciones.

Advertencia: Para evitar el riesgo de lesiones graves, lea cuidadosamente estas instrucciones antes de utilizar su nutribullet®. Siempre que utilice dispositivos eléctricos, tenga en cuenta las precauciones básicas de seguridad, incluyendo la siguiente información importante.

SEGURIDAD PERSONAL

AL LICUAR CON EL VASO NUTRIBULLET®:

No agregue líquidos calientes a los recipientes antes de licuar.

ADVERTENCIA Agregue primero ingredientes frescos o a temperatura ambiente. Los ingredientes calientes pueden generar presión interna en los recipientes herméticos y hacer que exploten, lo cual puede ocasionar quemaduras.

Tenga precaución al licuar líquidos calientes en el producto (procesador de alimentos o licuadora), ya que éstos pueden salir expulsados del electrodoméstico debido a un escape repentino de vapor.

Nunca licúe líquidos o ingredientes carbonatados. Los gases liberados pueden causar una acumulación de presión y hacer que el recipiente explote, lo cual puede ocasionar lesiones.

ADVERTENCIA Nunca deje que las mezclas se asienten dentro del recipiente hermético sin liberar primero la presión interna.

Nunca deje la cuchilla de extracción en la base eléctrica a menos que esté enroscada en el vaso o recipiente.

AL LICUAR CON LA JARRA:

Tenga cuidado al licuar líquidos calientes en la jarra.

ADVERTENCIA Nunca encienda el electrodoméstico sin haber insertado y asegurado el tapón en la tapa de la jarra, ya que los ingredientes pueden salpicar y, si están calientes, pueden causar quemaduras y/o daños materiales.

La fricción causada por la cuchilla giratoria aumenta la temperatura y la presión dentro del recipiente hermético.

No utilice el electrodoméstico por más de un minuto. Si el recipiente se siente caliente al tacto, déjelo enfriar y luego ábralo cuidadosamente, manteniéndolo alejado de su cuerpo.

Retire cualquier utensilio o elemento extraño antes de licuar.

Nunca descuide su nutribullet® mientras esté encendido. Todo electrodoméstico debe utilizarse con estricta precaución en presencia de niños.

Para evitar el riesgo de descarga eléctrica, nunca sumerja el cable, el enchufe ni la base eléctrica en agua ni en ningún otro líquido.

Evite siempre el contacto con piezas en movimiento.

- Este electrodoméstico no está diseñado para ser utilizado por personas (incluidos niños) con discapacidades físicas, sensoriales o mentales o sin experiencia ni conocimiento en el manejo del mismo, a menos que se encuentren bajo la supervisión e instrucción de una persona responsable de su seguridad.
- Los niños deben estar siempre bajo supervisión para asegurarse de que no jueguen con el electrodoméstico.
- Si el cable de alimentación está dañado, debe pedirle al fabricante, a un agente de servicio autorizado o a una persona cualificada que lo reemplace con el fin de prevenir riesgos.
- Apague y desconecte el electrodoméstico antes de cambiar accesorios o manipular piezas en movimiento.
- Para reducir el riesgo de lesiones personales o daños materiales, mantenga las manos y otros utensilios alejados de la cuchilla.
- Para reducir el riesgo de lesiones y fugas, asegúrese de que la base de la cuchilla esté completamente enroscada en el vaso antes de colocarla en la base eléctrica y encender el electrodoméstico.

Las cuchillas son filosas. Manipúlelas con cuidado.

- El uso de accesorios no recomendados o no distribuidos por el fabricante puede causar incendios, descargas eléctricas o lesiones.

ADVERTENCIA

Si está tomando medicamentos para el colesterol, la presión arterial, anticoagulantes, tranquilizantes, antidepresivos, o de cualquier otro tipo, por favor consulte con su médico antes de consumir cualquiera de las recetas nutribullet®.

Las siguientes semillas contienen químicos que liberan cianuro en el cuerpo al ingerirse; por tanto, no las utilice en su nutribullet®: semillas de manzana, de albaricoque, de cereza, de ciruela y de durazno.

SEGURIDAD DEL PRODUCTO

- Si su nutribullet® no funciona adecuadamente o si presenta algún deterioro o daño, deje de utilizarlo y comuníquese con el área de Servicio al Cliente para recibir asistencia.
- Para evitar que su nutribullet® se recaliente, no deje el motor encendido durante más de un minuto, ya que esto puede dañarlo y aumentar la presión térmica dentro del vaso, lo que puede causar lesiones personales.
- Asegúrese de que el empaque esté bien ajustado a la cuchilla antes de

- cada uso. Si el cierre hermético está dañado, reemplace el portacuchillas.
- Si el motor deja de funcionar, desconecte la base eléctrica y déjela enfriar durante por lo menos 15 minutos. Esto reiniciará el interruptor térmico interno.
 - **Nunca utilice el nutribullet® sin haber agregado líquidos o con el vaso vacío, ya que esto podría dañar la cuchilla.**
 - El nutribullet® no está diseñado para utilizarse en microondas. No ponga los vasos, la base eléctrica ni ningún accesorio nutribullet® en el microondas, ya que esto puede dañar el electrodoméstico.
 - El uso de adaptadores y convertidores se considera una modificación no autorizada del producto y, por lo tanto, anula la garantía. El uso de este producto en lugares con especificaciones eléctricas diferentes puede ocasionar daños en el producto.
 - **PRECAUCIÓN:** Para evitar riesgos debido al reinicio involuntario del interruptor térmico, este electrodoméstico no debe alimentarse por medio de un conmutador externo, como un temporizador, ni estar conectado a un circuito encendido y apagado regularmente por parte de la empresa de servicios.
 - Revise periódicamente el cable y el conector para detectar posibles daños. No utilice ningún electrodoméstico si el cable o el enchufe presentan daños.

- No hale, tuerza ni dañe el cable de alimentación.
- No deje el cable colgando del borde del mesón o mesa.
- No deje que el cable entre en contacto con superficies calientes como la estufa.
- La base eléctrica nutribullet® fue diseñada exclusivamente para operar con los vasos y cuchillas nutribullet® y no con otros productos de la marca Bullet, como magic bullet®. Si se usa con artículos no fabricados específicamente para nutribullet®, se anulará la garantía.

ADVERTENCIA: RECOMENDACIONES DE VENTILACIÓN

ADVERTENCIA Siempre utilice su nutribullet® en una superficie plana, dejando un espacio libre debajo y alrededor de la base eléctrica para permitir que el aire circule de forma adecuada. Este electrodoméstico está provisto de ranuras y aberturas de ventilación para garantizar que el motor funcione de manera segura y sin recalentarse.

ADVERTENCIA: Para evitar el riesgo de incendio, asegúrese de que las aberturas de la base eléctrica no tengan polvo ni pelusas y no se encuentren obstruidas con materiales inflamables, como periódicos, manteles, servilletas, paños de cocina o individuales.

- Siempre utilice la jarra debidamente tapada.

- Para las recetas en las que deban incorporarse algunos ingredientes durante el proceso de licuado, agregue primero los ingredientes base, tape la jarra con el tapón en su lugar y comience a licuar. Una vez que los ingredientes estén bien mezclados, gire para retirar el tapón y vierta o agregue cuidadosamente los demás ingredientes a la mezcla.
- Si necesita empujar los ingredientes hacia la cuchilla, utilice únicamente el mezclador incluido con el nutribullet®, el cual está específicamente diseñado para no entrar en contacto con la cuchilla. Las espátulas, cucharas y otros utensilios pueden alcanzar la cuchilla y causar daños al electrodoméstico o posibles lesiones.
- **Nunca utilice sus dedos ni ninguna otra parte de su mano para empujar los ingredientes hacia la cuchilla.** Utilice únicamente el mezclador incluido.
- La acción ciclónica® de su nutribullet® requiere el uso de líquidos para preparar batidos y otros alimentos nutritivos. El nutribullet® no está diseñado para utilizarse sin líquidos o como triturador de hielo. **Siempre agregue líquidos a sus recetas.**
- Le recomendamos reemplazar la cuchilla de extracción cada 6 meses (dependiendo de su uso) o según sea necesario para obtener un rendimiento óptimo.
- No utilice su nutribullet® al aire libre. En caso de exponerlo a cambios climáticos extremos, como la lluvia u otras condiciones de humedad, suspenda su uso.
- **Desconecte su nutribullet® cuando no esté en uso, y asegúrese de que la base eléctrica esté desconectada antes de armarlo, desarmarlo, ponerle otras piezas o limpiarlo.**
- **Para evitar fugas, no llene demasiado los recipientes para licuar.** La jarra está marcada con dos indicadores MAX: uno para ingredientes sólidos (indicador superior) y otro para ingredientes líquidos (indicador inferior). Los vasos nutribullet® también están marcados con un indicador MAX. Al momento de agregar los ingredientes, asegúrese de que no sobrepasen la cantidad máxima sugerida (indicadores MAX), puesto que, si esto ocurre, podría haber fugas y generarse una presurización peligrosa.
- Nunca retire el vaso ni el portacuchillas de la base eléctrica sin que el motor se haya detenido por completo. Retirar el vaso o el portacuchillas mientras la base eléctrica está encendida podría dañar el acoplamiento de la cuchilla o el engranaje del motor.

! Conserve estas instrucciones!
● SOLO PARA USO DOMÉSTICO



Contenido.


- 35 Piezas incluidas**
- 36 Partes de la licuadora en combo nutribullet®**
- 37 Guía de inicio**
 - 37 Recomendaciones de seguridad
 - 38 Montaje y uso de la jarra
 - 41 Montaje y uso del vaso nutribullet®
- 43 Panel de control de la licuadora**
 - 44 Uso del panel de control
- 45 Cuidado & mantenimiento**
 - 45 Limpieza del nutribullet®
 - 47 Almacenamiento
- 47 Repuestos**
- 48 Un año de garantía limitada para la licuadora en combo nutribullet®**

Gracias por elegir la licuadora en combo nutribullet®.

Piezas incluidas.



vaso de
900 ml

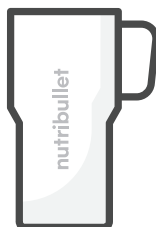

vaso de
700 ml con asa



vaso de
500 ml



jarra con cuchilla
integrada



cuchilla
extractora con
rosca



2 tapas
para llevar



base de motor




empujador



tapa para jarra
con cubierta
con ventilación

Partes de la licuadora en combo nutribullet®

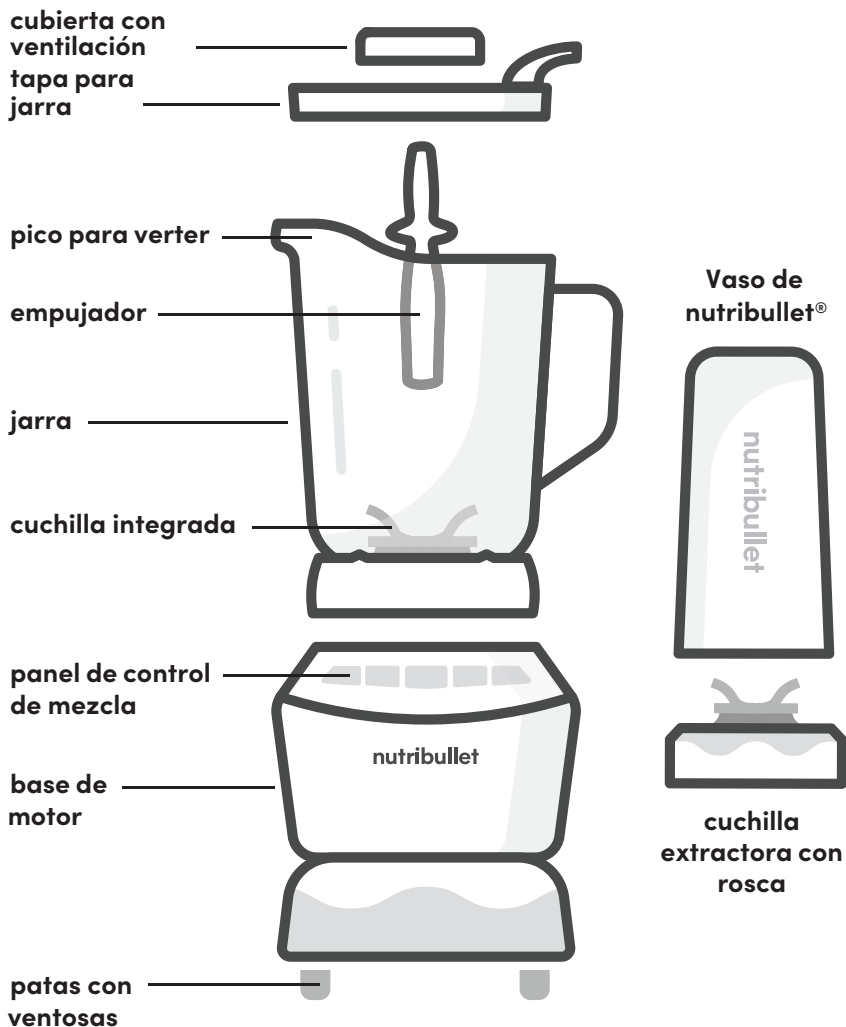

Guía de inicio.

SIEMPRE QUE UTILICE ESTE ELECTRODOMÉSTICO, TENGA EN CUENTA LAS SIGUIENTES RECOMENDACIONES DE SEGURIDAD:

- Asegúrese de que la base esté conectada antes de utilizar el electrodoméstico.
- **NO** utilice la jarra sin la tapa y el tapón.
- Nunca encienda el electrodoméstico si está vacío.
- Los accesorios no están diseñados para utilizarse en el microondas, ya que esto puede ocasionarles daños.
- **Nunca** descuide el electrodoméstico mientras esté encendido.

Nunca licúe ingredientes calientes en los vasos herméticos nutribullet®.

ADVERTENCIA

Al agitarse, los ingredientes calientes pueden causar una acumulación de presión en los recipientes herméticos y salir expulsados violentamente al abrirlos. Siempre comience el proceso de licuado con ingredientes o líquidos refrigerados o a temperatura ambiente (21 °C o más fríos).



Tenga mucho cuidado al licuar líquidos calientes en la jarra.

ADVERTENCIA

Es posible que a través del orificio de la tapa salga vapor y salpicaduras de líquidos calientes, lo que puede causar escaldaduras o quemaduras. **NUNCA** licúe líquidos calientes sin haber tapado la jarra con el tapón en su lugar. La tapa cuenta con un orificio que permite liberar el vapor y la presión, a la vez que protege contra salpicaduras excesivas. **NUNCA LICÚE LÍQUIDOS CALIENTES EN LOS VASOS NUTRIBULLET® NI EN NINGÚN OTRO RECIPIENTE HERMÉTICO.**

Al licuar líquidos calientes, agregue ingredientes líquidos y sólidos a la jarra sin sobrepasar la cantidad máxima sugerida (indicadores MAX). Tape la jarra e inserte el tapón. Presione el botón de encendido y apagado y licúe en velocidad **BAJA**. Cuando los ingredientes se hayan mezclado y la mezcla deje de salpicar (deje de moverse), aumente la velocidad según sea necesario.

Montaje y uso de la jarra.

NOTA: La jarra está marcada con dos líneas MAX: una para ingredientes sólidos (línea superior) y una para ingredientes líquidos (línea inferior). Al llenar la jarra, asegúrese de que los ingredientes no sobrepasen sus respectivas líneas MAX.

- 1 Lea todas las advertencias de seguridad en la sección Medidas de seguridad (págs. 2-5) antes de ir al Paso 2.




Coloque la base en una superficie limpia, seca y plana, como un mesón o una mesa.



Coloque la jarra en una superficie limpia, seca y plana. Ponga los ingredientes en la jarra asegurándose de que no sobrepasen la línea MAX.



Ponga la tapa para jarra con la cubierta con ventilación acoplada y asegúrese de que quede alineada con el asa.

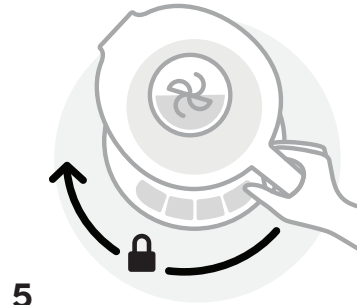


Coloque la jarra sobre la base —con el asa hacia la derecha del panel de control y no hacia atrás— y gírela suavemente en sentido horario para bloquearla. Cuando oiga un clic, estará bloqueada y lista para mezclar.

NOTA: Si usted es zurdo, coloque el asa hacia el centro del panel de control y gire en sentido horario.

6



Conecte el cable de alimentación a un tomacorriente y presione el botón **POWER**  para encender la licuadora.

7



Para comenzar a licuar, seleccione una velocidad, o la opción **EXTRACCIÓN** en el panel de control de la licuadora. Esta opción se apagará automáticamente. Los botones se iluminan mientras el electrodoméstico está encendido.

NOTA: Consulte la información sobre el panel de control de la licuadora de la página 16 para ver las definiciones de velocidad.


NOTA: Si necesita agregar ingredientes mientras licúa, cambie la velocidad a **BAJA** y retire únicamente el tapón de la tapa de la jarra. Agregue los ingredientes a través del orificio de la parte superior de la tapa, con ayuda del mezclador si es necesario. Vuelva a insertar el tapón y aumente a la velocidad deseada. **NO** agregue elementos por el orificio de ventilación si está licuando ingredientes calientes.



PRECAUCIÓN: No utilice ningún otro utensilio diferente al mezclador incluido con el nutribullet® para empujar los ingredientes hacia la cuchilla. El mezclador está específicamente diseñado para no entrar en contacto con la cuchilla. Nunca utilice espátulas, cucharas ni ningún otro utensilio que pueda ser lo suficientemente largo para alcanzar la cuchilla, lo que podría causar daños en el dispositivo o lesiones personales.



8



Si los ingredientes se adhieren a los costados de la jarra, presione el botón **POWER**  y espere a que la cuchilla deje de girar. Luego, retire la tapa de la jarra y remueva los ingredientes con el mezclador. Cuando haya terminado, vuelva a colocar la tapa y siga licuando. Si vuelven a adherirse, le recomendamos agregar más líquido.

9




Cuando la preparación esté lista, presione el botón **POWER**  o el botón de la velocidad que seleccionó y espere a que las cuchillas dejen de girar. La unidad entrará en modo inactivo y el botón **POWER**  permanecerá iluminado.


Blades are sharp. Never



ADVERTENCIA: Las cuchillas son filosas. Nunca introduzca las manos en la jarra.

10

Presione el botón de **POWER**  para apagar la unidad por completo.

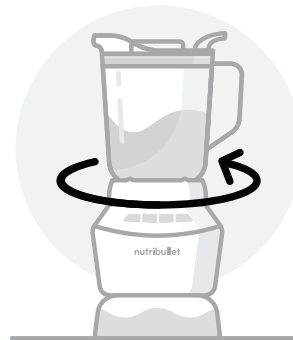

11

Gire la jarra en sentido antihorario y retírela de la base del motor. ¡Sirva y disfrute!

Montaje y uso del vaso nutribullet®


- 1 Repase todas las advertencias y precauciones de la sección de recomendaciones importantes (págs. 2 a 5) antes de continuar con el paso 2.
- 2 Ubique la base del motor en una superficie limpia, seca y plana, como un mesón o una mesa.



3

Agregue los ingredientes al vaso nutribullet®.

NOTA: No llene demasiado el recipiente. Para evitar fugas, asegúrese de no sobrepasar la cantidad máxima sugerida (indicadores MAX).

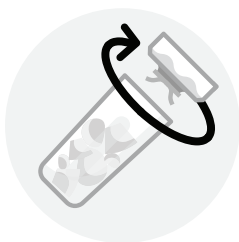

4

Gire la cuchilla de extracción de fácil instalación en el vaso hasta que quede bien asegurada.




ADVERTENCIA

Manipule con cuidado la cuchilla, ya que es filosa. Nunca descuide el electrodoméstico mientras esté encendido.

NUNCA LICÚE INGREDIENTES CALIENTES, ya que esto puede generar una acumulación excesiva de presión y ocasionar lesiones personales o daños materiales.

5



Conecte el cable de alimentación a un tomacorriente y presione el botón **POWER**  para encender la licuadora.

6



Voltee el vaso y colóquelo sobre la base del motor, girándolo suavemente en sentido horario para asegurarlo en su lugar.




7

Para comenzar a licuar, seleccione una velocidad o la opción **EXTRACCIÓN** en el panel de control de la licuadora. Esta opción se apagará automáticamente. Los botones se iluminan mientras el electrodoméstico está encendido.


NOTA: Consulte la información sobre el panel de control de la licuadora de la página 43 para ver las definiciones de velocidad.



8

Cuando la preparación esté lista, presione el botón de encendido y apagado o el botón de la velocidad que seleccionó para pausar o detener el dispositivo y espere a que las cuchillas dejen de girar. La unidad entrará en modo inactivo y el botón **POWER**  permanecerá iluminado.

NOTA: Las velocidades se apagarán automáticamente después de 60 segundos.

9 Presione el botón **POWER**  para apagar la unidad por completo.



10

Retire el vaso girándolo suavemente en sentido antihorario. Escuchará un clic. ¡Disfrute!


NOTA: El proceso de licuado no debería tomar más de un minuto para lograr una consistencia suave y cremosa.



CAUTION PRECAUCIÓN


No retire la cuchilla de extracción del vaso nutribullet® hasta que el proceso de licuado haya finalizado por completo. No utilice la cuchilla de extracción como tapa para almacenar mezclas en el vaso. Algunos alimentos pueden contener ingredientes activos o liberar gases que se expandirán si se dejan en un recipiente hermético, lo que provocaría una acumulación de presión excesiva que puede ocasionar lesiones. Si desea almacenar el contenido en el vaso, utilice una envoltura de plástico o papel de aluminio para sellar el recipiente. Siempre apunte el vaso lejos de su cuerpo al abrirlo.

Panel de control de la licuadora.

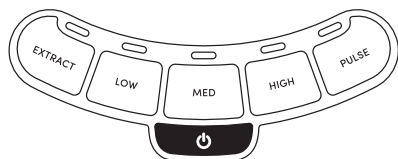


ENCENDIDO/APAGADO

El botón de encendido acciona el suministro de energía del aparato. Al presionarlo, el botón se ilumina para indicar que el motor está encendido y que las otras funciones pueden usarse. Apague y desconecte la unidad cuando no esté usándola.

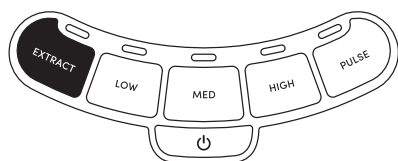


MODO DE EXTRACCIÓN

Úselo para preparar nutritivos batidos con frutas enteras, verduras y hielo. Este botón activa un ciclo que se apaga automáticamente.

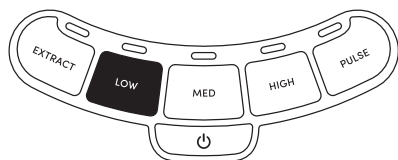

VELOCIDAD BAJA

Úsela para preparar mezclas poco espesas, salsas y adobos; para batir huevos, o para procesar alimentos cocidos y frutas crudas.

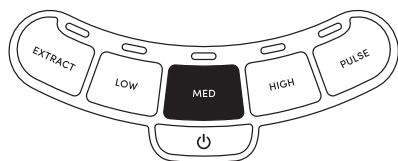

VELOCIDAD MEDIA


Úsela para preparar sopas cremosas, mezclar dips, triturar nueces, y mezclar salsas, pastas untables, cocteles, bebidas en polvo y malteadas.



¡ADVERTENCIA!


NO MEZCLE LÍQUIDOS CALIENTES EN NINGÚN VASO DE NUTRIBULLET®

SELLADO. Esto podría causar un aumento excesivo de la presión y resultar en lesiones personales o daños materiales. Los ingredientes calientes solo deben mezclarse en la jarra teniendo en cuenta las medidas de seguridad adecuadas.

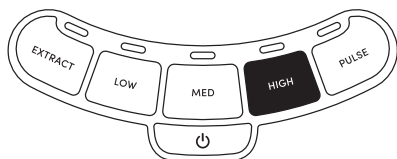

VELOCIDAD ALTA

Úsela para licuar mezclas espesas y triturar frutas y verduras congeladas.

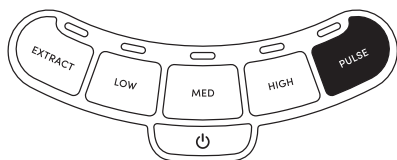

PULSACIONES*




Úselas para picar y procesar de manera controlada.



ADVERTENCIA: ¡NO use este modo con ingredientes calientes!


Cómo usar el panel de control de mezcla.

ALTO, MEDIO O BAJO

Seleccione una velocidad y presione una vez para encender. El botón se iluminará. Para pausar o detener la unidad, presione el botón nuevamente—dejará de iluminar—o presione **ENCENDIDO** . En modo de espera, el botón **ENCENDIDO**  permanecerá iluminado. Para apagar después de pausar, presione **ENCENDIDO**  y desconecte la unidad.

NOTA: Si usa la jarra, las velocidades funcionan hasta pausar o detener. Si usa los vasos de nutribullet®, las velocidades se apagan automáticamente después de 60 segundos.

MODO DE EXTRACCIÓN

Presione el botón **EXTRACT** y el Combo de Licuadora nutribullet® hará el trabajo por usted. Este modo se detiene automáticamente al terminar el ciclo. Para pausar o detener la unidad, presione **EXTRACT** nuevamente o **ENCENDIDO** .

PULSACIONES

Presione y suelte el botón **PULSE** para picar ingredientes. Si deja el botón presionado, el motor funcionará hasta que lo suelte.

Cuidado & mantenimiento.

Limpiar su licuadora en combo nutribullet® es fácil. La jarra puede ponerse en el lavaplatos, al igual que los vasos y las tapas para llevar, aunque estos últimos deben ubicarse en la **BANDEJA SUPERIOR** del lavaplatos. La cuchilla y la base del motor pueden lavarse rápidamente a mano con agua y jabón. Continúe leyendo para conocer las mejores prácticas.

A continuación, le explicamos cómo limpiar su nutribullet®:

PASO 1:

Lo más importante: **SIEMPRE APAGUE LA UNIDAD Y DESCONECTE** la base del motor cuando no esté en uso. No manipule el dispositivo, no lo desarme, no cambie ningún accesorio al limpiarlo, ni lo descuide hasta que todas las piezas hayan dejado de moverse.

PASO 2:

Retire el vaso nutribullet®, la cuchilla de extracción o la jarra de la base del motor.

PASO 3:

Limpie los componentes (base del motor, cuchilla de extracción, vasos nutribullet®, jarra) como se indica en esta sección.

BASE DEL MOTOR

- Para evitar el riesgo de lesiones, **NUNCA** limpie el mecanismo de encendido de la base del motor mientras su licuadora en combo nutribullet® esté conectada.
- No intente retirar ninguna pieza de la base del motor.
- Utilice una esponja o paño de cocina humedecido con agua tibia y jabón para limpiar la base del motor.
- Si es necesario, puede utilizar un cepillo pequeño para limpiar el área del mecanismo de encendido.
- Para limpiar los residuos de fugas de la base del motor, utilice una esponja húmeda y agua tibia.
- Si es necesario, puede utilizar un cepillo pequeño para limpiar el área del mecanismo de encendido.



ADVERTENCIA: Nunca sumerja la base eléctrica en agua.

CUCHILLA DE EXTRACCIÓN DE FÁCIL INSTALACIÓN

- Las cuchillas son filosas. Manipule con cuidado la cuchilla de al limpiarla. Es mejor limpiar las cuchillas inmediatamente después de usarlas para evitar la acumulación de residuos. Si quedan atascadas partículas de comida en las cuchillas, utilice un cepillo pequeño o una esponja para retirarlas.
- No retire ningún componente de la cuchilla de extracción, ya que esto puede dañarla permanentemente y provocar fugas al licuar. Si, con el tiempo, la cuchilla se suelta o se daña, puede pedir una nueva en nutribullet.com o comunicarse con el área de servicio al cliente.
- Seque completamente la cuchilla de extracción después de usarla.
- Revise regularmente el estado de la parte inferior de la cuchilla para detectar posibles grietas o roturas. Si se daña, reemplácela de inmediato para evitar posibles lesiones personales.

VASOS NUTRIBULLET® Y TAPAS PARA LLEVAR

Estos componentes son aptos para lavaplatos, pero deben ubicarse en la **BANDEJA SUPERIOR**. Recomendamos enjuagarlos y restregarlos un poco con un cepillo para eliminar cualquier resto de suciedad antes de colocarlos en el lavaplatos. **NUNCA** utilice el ciclo de desinfección para lavar los vasos, puesto que el calor que este genera puede deformar el plástico.

JARRA NUTRIBULLET®



ADVERTENCIA: ¡Las cuchillas son afiladas! Tenga cuidado al limpiar la jarra.

- La jarra es apta para lavaplatos. Recomendamos enjuagarla y restregarla un poco con un cepillo para eliminar cualquier resto de suciedad antes de colocarla en el lavaplatos. **NUNCA** utilice el ciclo de desinfección para lavar la jarra, puesto que el calor que este genera puede deformar el plástico.
- Si lo prefiere, lave a mano la jarra con agua y jabón. Es posible que necesite refregarla un poco más con un cepillo o una esponja para retirar los residuos difíciles.
- Revise regularmente la jarra para detectar posibles grietas o roturas.

Si se daña, reemplácela de inmediato para evitar posibles lesiones personales.

- **NUNCA UTILICE UNA JARRA QUE NO SE ALINEE CORRECTAMENTE CON LA CUCHILLA.** Si lo hace, la jarra y la base del motor podrían separarse, dejando expuesta la cuchilla, lo que puede causar lesiones personales graves.

MEZCLADOR

- Siempre lave a mano el mezclador con agua y jabón. Es posible que necesite refregarla un poco más con un cepillo o una esponja para retirar los residuos difíciles.

LIMPIEZA DE RESIDUOS DIFÍCILES:

Si quedan residuos difíciles en los vasos nutribullet®, en las cuchillas de extracción o en la jarra, le recomendamos llenar el recipiente con agua a temperatura ambiente (21 °C o menos) hasta el indicador MAX y agregar de 1 a 2 gotas de

jabón para platos. Para los vasos, ponga la cuchilla y licúe en la base del motor durante 20 a 30 segundos. Para la jarra, tápela y licúe en la base del motor durante el mismo tiempo (20 a 30 segundos). Esto hará que los residuos aflojen lo suficiente para luego retirarlos con agua y jabón.

Almacenamiento:

Almacene su licuadora en combo nutribullet® en posición vertical con la jarra debidamente tapada. No coloque nada encima de la tapa. Guarde las piezas restantes en un lugar seguro donde no se dañen ni causen daños.



ADVERTENCIA: NUNCA deje la cuchilla de extracción en la base del motor sin el vaso nutribullet® o la jarra, ya que las cuchillas quedarían expuestas, lo que representaría un grave riesgo de laceración.

Repuestos.

Para pedir piezas y accesorios adicionales, visite nutribullet.mx comuníquese con el área de servicio al cliente: 800-nbullet.

Un año de garantía limitada para la licuadora en combo nutribullet®

GARANTÍA LIMITADA PARA NUTRIBULLET®

La garantía limitada de nutribullet® incluye únicamente los términos y obligaciones que se establecen a continuación.

nutribullet®, LLC (“nutribullet®”) garantiza que este producto no tendrá defectos de materiales ni de fabricación durante un año a partir de la fecha de compra. Esta garantía limitada es válida solo en el país en el que se compra el producto y no tiene cargo adicional. Sin embargo, se aplicarán cobros de envío y procesamiento por devoluciones, cambios o reembolsos.

En caso de defecto durante esta garantía limitada, nutribullet® tendrá la opción de (1) reparar el producto, sin cargo adicional, utilizando repuestos nuevos o restaurados; (2) cambiar el producto por uno nuevo o que haya sido fabricado con piezas nuevas o reparadas y que sea, por lo menos, funcionalmente equivalente al producto original; o (3) reembolsar el dinero correspondiente al precio de compra del producto.

En caso de cambio, al nuevo producto se le aplica el periodo de garantía restante del producto original. En caso de reparación, el producto tiene una garantía de un año a partir de la fecha de reparación. Cuando se cambia un producto o pieza, el nuevo componente pasa a ser de su propiedad, y el componente sustituido pasa a ser propiedad de nutribullet®. Cuando se hace un reembolso, su producto pasa a ser propiedad de nutribullet®.

USO DEL SERVICIO DE GARANTÍA

Para reclamar la garantía limitada, comuníquese con nuestra área de servicio al cliente al teléfono 800-nbullet contáctenos a través de correo electrónico desde nuestra página web (www.nutribulletmx): haga clic en el enlace de servicio al cliente, llene el formulario de contacto y envíelo. Será un placer para nosotros ayudarle. Cuando se comunique con nuestra área de servicio al cliente, se le pedirá su nombre, dirección, número de teléfono y presentar

el comprobante original de la compra (factura) que contenga la descripción del (los) producto (s), la fecha de compra y el (los) número (s) de serie nutribullet® correspondiente (s). Antes de enviar su producto para hacer efectiva la garantía limitada, asegúrese de guardar una copia de todos los documentos relevantes (factura, etc.). Siempre se recomienda adquirir un seguro para el producto y pagar por servicios de seguimiento cuando envíe su producto. Recuerde que se aplicarán cobros de envío y procesamiento que no están cubiertos por la garantía limitada de un año.

EXCEPCIONES & LIMITACIONES

Esta garantía limitada de un año de nutribullet® aplica solo para los productos nutribullet® distribuidos por o para nutribullet®, los cuales están identificados con la marca comercial nutribullet®, el nombre comercial, el logotipo y el código de barras. Esta garantía no aplica para ningún otro producto que pueda parecer auténtico, pero que no haya sido distribuido o vendido por nutribullet®, LLC.

Esta garantía no cubre el desgaste normal por el uso.

Esta garantía limitada es para uso exclusivo del cliente y no es válida cuando el producto se utiliza en un entorno comercial o institucional.

Esta garantía no es transferible y es

para uso exclusivo del cliente original, quien debe presentar comprobante de la compra. La compensación que le ofrece esta garantía al cliente es la reparación o el cambio del producto (o el reembolso del precio de compra, en caso de que ni la reparación ni el cambio sean factibles). nutribullet®, LLC no se hace responsable de ningún daño incidental o indirecto por incumplimiento de esta garantía o de cualquier garantía implícita de este producto. Esta garantía limitada le otorga al cliente derechos legales específicos y otros posibles derechos que varían según su ubicación. nutribullet® no se hace responsable de daños a productos que no estén amparados por esta garantía (por ejemplo, vasos, libros, manual de usuario). Esta garantía limitada no aplica (a) para daños causados por accidentes, uso incorrecto o maltrato; (b) para daños causados por un mantenimiento inadecuado (incluida la reparación no autorizada de piezas); (c) para un producto o una parte que se haya modificado; (d) si algún número de serie o la marca comercial de nutribullet® se eliminó o se borró; o (e) si el producto se ha utilizado con un adaptador o convertidor.

ESTA GARANTÍA LIMITADA Y LAS COMPENSACIONES ESTABLECIDAS ANTERIORMENTE SON EXCLUYENTES Y SUSTITUYEN TODAS LAS DEMÁS GARANTÍAS, COMPENSACIONES Y CONDICIONES, ORALES O ESCRITAS, EXPRESAS O IMPLÍCITAS. NUTRIBULLET® NO ACEPTA NINGUNA GARANTÍA IMPLÍCITA, INCLUYENDO, ENTRE OTRAS, GARANTÍAS DE COMERCIALIZACIÓN E IDONEIDAD PARA UN PROPÓSITO EN PARTICULAR. SI NUTRIBULLET NO PUEDE RENUNCIAR LEGALMENTE A LAS OBLIGACIONES IMPLÍCITAS BAJO ESTA GARANTÍA LIMITADA, TODAS LAS GARANTÍAS, INCLUIDAS LAS DE COMERCIALIZACIÓN E IDONEIDAD PARA UN PROPÓSITO EN PARTICULAR, ESTARÁN LIMITADAS A LA DURACIÓN DE ESTA GARANTÍA.

Ningún revendedor, agente de servicio o empleado de nutribullet® está autorizado para realizar modificaciones a esta garantía.

NUTRIBULLET NO SE HACE RESPONSABLE DE NINGÚN DAÑO DIRECTO, ESPECIAL, INCIDENTAL O CONSECUENTE COMO RESULTADO DE ALGÚN INCUMPLIMIENTO DE LA GARANTÍA O CONDICIÓN, O BAJO CUALQUIER OTRA TEORÍA LEGAL, INCLUYENDO, ENTRE OTRAS, LAS GANANCIAS NO PERCIBIDAS, EL TIEMPO DE INACTIVIDAD, LA BUENA VOLUNTAD Y EL DAÑO O SUSTITUCIÓN DE EQUIPOS

Y BIENES. NUTRIBULLET® NO GARANTIZA QUE PUEDA REPARAR CUALQUIER PRODUCTO BAJO ESTA GARANTÍA LIMITADA.

Algunos estados y provincias no permiten la excepción o limitación de daños incidentales o consecuentes ni ninguna otra excepción o limitación durante la validez de las garantías o condiciones implícitas, por lo que las limitaciones o excepciones mencionadas anteriormente pueden no aplicaren su caso. Esta garantía le otorga derechos legales específicos y otros derechos que varían dependiendo del estado o la provincia.

LICUADORA
MARCA: NTRIBULLET®
MODELO: NBC-12A
ESPECIFICACIONES ELECTRICAS:
120 V ~ 60 Hz 1 200W máx IPX2



**CONSUMO DE ENERGÍA ELÉCTRICA POR UNIDAD DE TIEMPO
EN OPERACIÓN: 1 099Wh
CONSUMO DE ENERGÍA EN MODO DE ESPERA : NA Wh**

Importador por:
Delonghi México S.A. DE C.V.
DME140114KY4
Bosque de Ciruelos 180 int 101
Colonia Bosques de las Lomas
Miguel Hidalgo Ciudad de México,
C.P. 11700 México.
Tel. 800-DLONGHI (800-3566444)
HECHO EN CHINA.

Capital Brands Distribution, LLC | www.nTRIBULLET.mx
Todos los derechos reservados.
nTRIBULLET® y el logo de nTRIBULLET® son marcas de CapBran Holdings, LLC
registradas en EE. UU. y en todo el mundo.

Las ilustraciones pueden diferir del producto real. Buscamos
constantemente mejorar nuestros productos y, por lo tanto, las
especificaciones que aquí figuran están sujetas a cambio sin previo aviso.

221216_NBF04500-DL